

 
 
目录 Contents

 
1

 
 


 
2

3

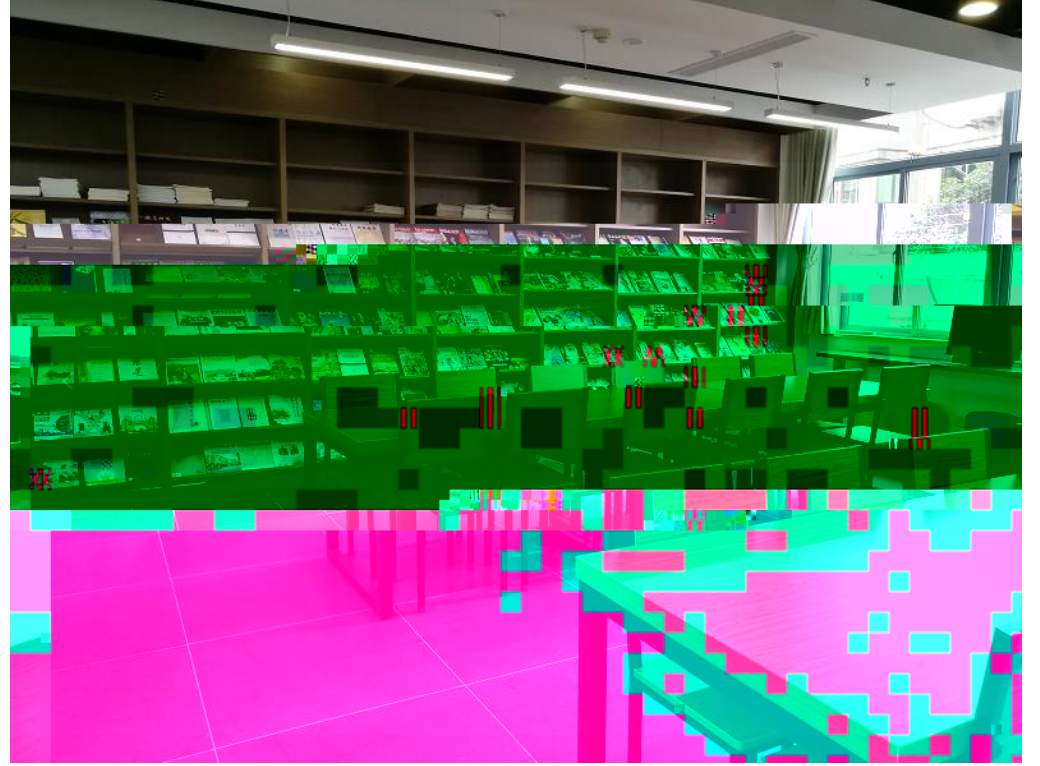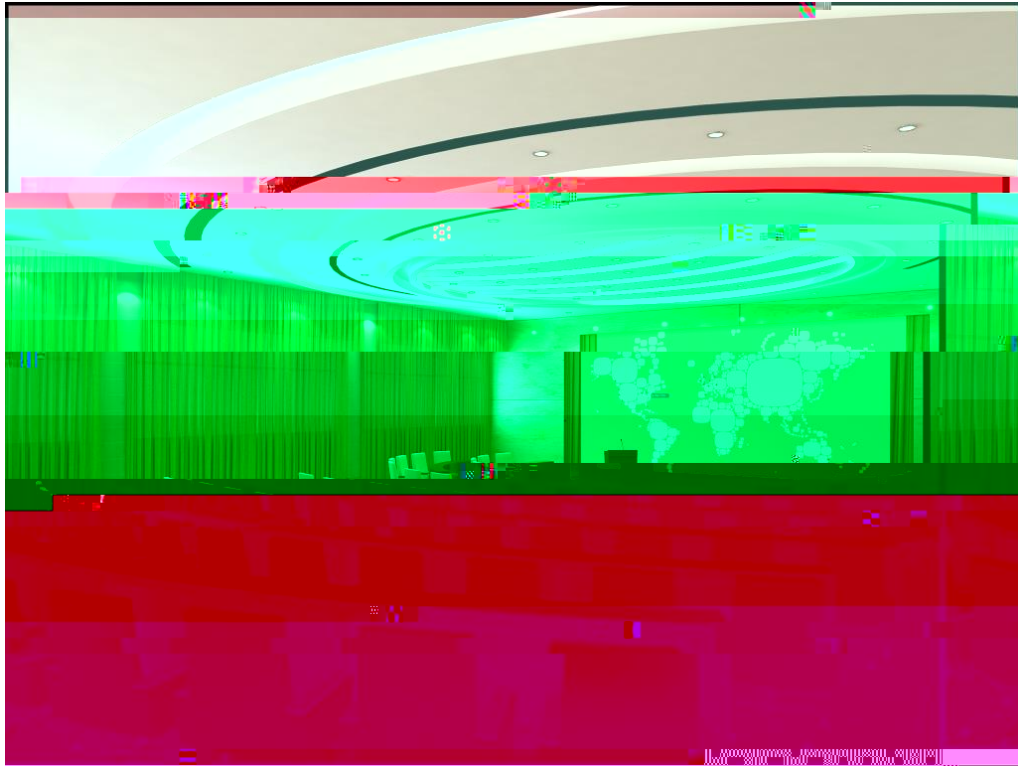


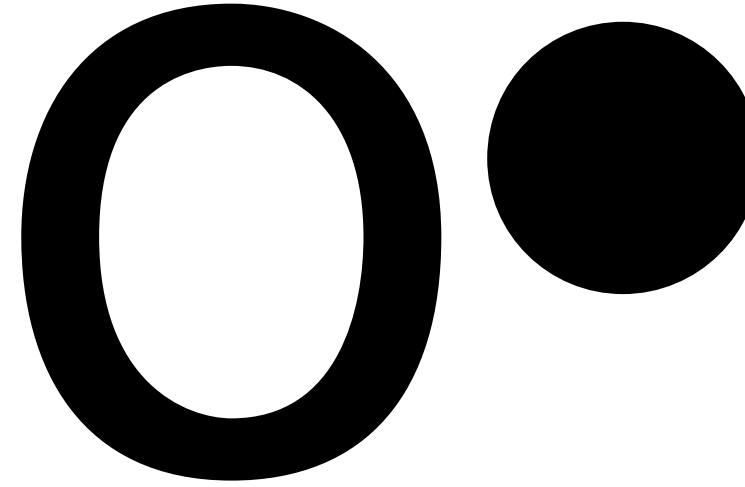

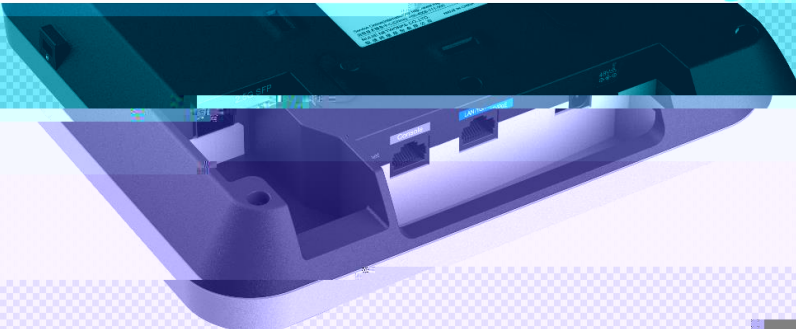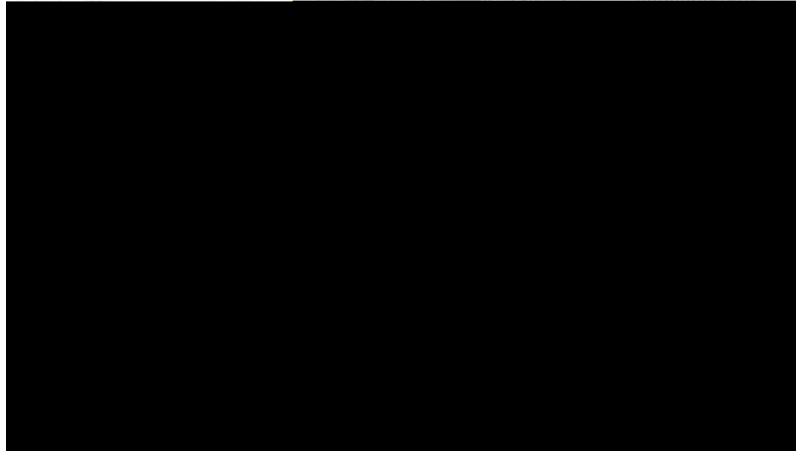



—	AP	/	
3Hz	AP	uboot	
—	AP		
3Hz	AP	Link down	
—	AP	CAPWAP	
3Hz	AP		
—	AP	CAPWAP	
3Hz	AP	CAPWAP	
3Hz 2 2	AP		

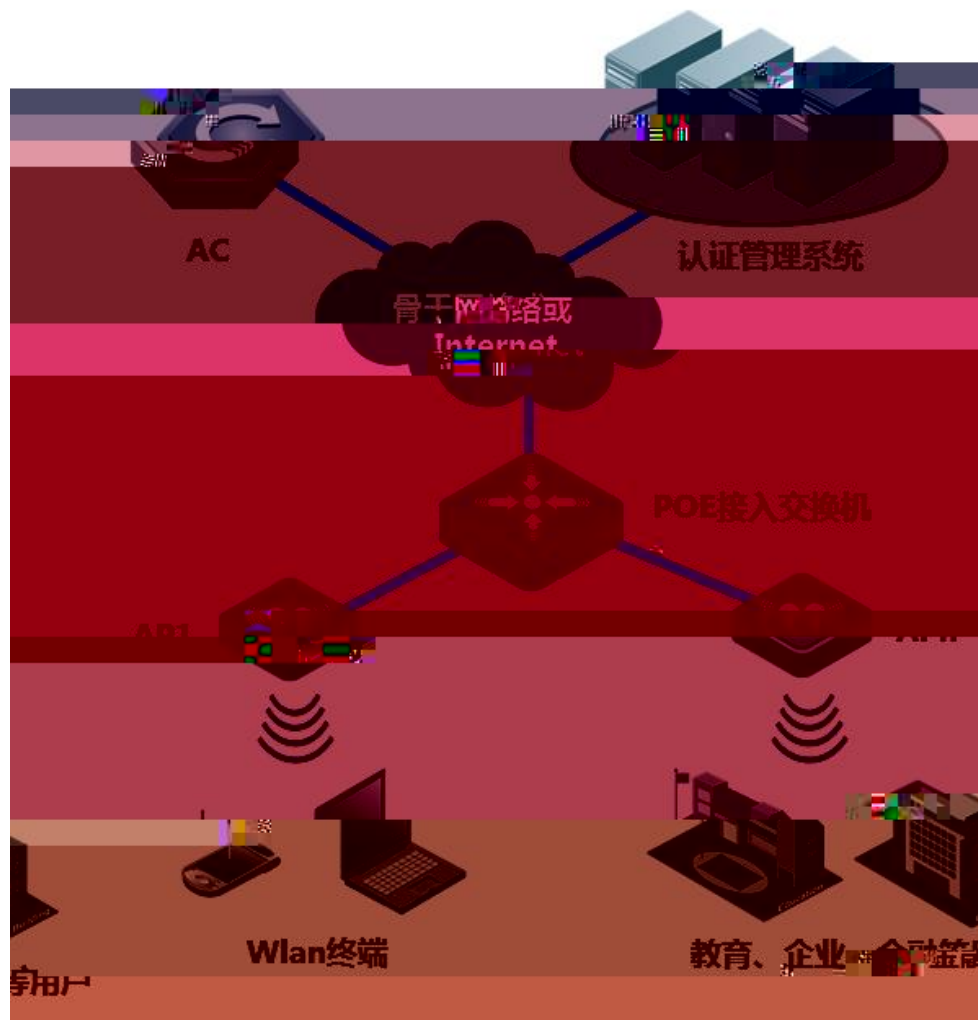 

目录 Contents

1



2

3

	11axsupport enable			
	no 11axsupport enable			
	no	11ax		
	Radio	11ax	11ax	STA
	dot11radio			

	long-gi { 0.8 1.6 3.2 }			
	no long-gi			
	no	11AX	0.8us	
	0.8	OFDM		0.8us
	1.6	OFDM		1.6us
	3.2	OFDM		3.2us
			0.8us	
	dot11radio			

	ofdma enable
	no ofdma enable
	no ofdma
	dot11radio

目录 Contents

1

基础网络配置

2

常用功能配置

3

日常维护和问题排查



RG-AP820-L(V3)
POE DC

802.3af

RG-AP820-L(V3)

AP820-L(V3)

